

**EOS-ID X Mark II / EOS-ID X / EOS-IDs Mark III / EOS-ID Mark IV**

EOS-ID X Mark II

EOS 5DS / 5DS R / 5D Mark IV / 5D Mark III / 5D Mark II / 6D Mark II / 6D

EOS 5DS R/5DS

EOS 5D Mark IV

EOS 5D Mark III/5D Mark II

EOS 6D Mark II

EOS 6D

EOS 7D Mark II / 7D

EOS 7D

EOS 7D Mark II

EOS 7D

600EX-II-RT 600EX-RT 580EX II 470EX-AI 430EX-III-RT 430EX II 320EX 270EX II 220EX 90EX Macro Twin Lite MT-26EX-RT Macro Twin Lite MT-24EX Macro Ring Lite MR-14EX II Macro Ring Lite MR-14EX

Speedlite Transmitter ST-E3-RT Speedlite Transmitter Off-Camera Shoe Cord OC-E3 Hot Shoe Adapter 3 TTL Connecting Cord 60 Connecting Cord 300 TTL Distributor Off-Camera Shoe Adapter OA-2

Directional Microphone DM-E9

1Ds Mark III, 1D Mark IV and 5D only  
 1Ds Mark III, 1D Mark IV, 5D, 7D only  
 1Ds, 5DS, 5D Mark IV, 5D Mark III, 5D Mark II, 6D, 7D Mark II and 7D only

\* These accessories provide TTL or manual flash control, but are not compatible with E-TTL or E-TTL II; no automatic flash with select EOS cameras.  
 \*\* Applies to all Canon EOS digital cameras with a microphone jack.

**EOS 80D / 77D / 70D / 60D / 60Da / 50D / 40D**

EOS 80D

EOS 77D

EOS 70D

EOS 60D/60Da

EOS 50D/40D

EOS 760D

EOS 800D

EOS 550D

EOS 700D

EOS 650D

EOS 600D

EOS 2000D

EOS 4000D

EOS 200D

EOS 100D

EOS M5

EOS M6

EOS M50

EOS M3

EOS M100

EOS M10

EOS M

77D Only

60D/60Da Only

80D/70D Only

80D/70D/60D/60Da Only

50D/40D Only

EOS 760D / 800D / 700D / 650D / 600D / 550D / 2000D / 4000D / 1200D / 1100D

EOS 760D / 800D / 1300D / 2000 Only

EOS 700D / 650D / 600D / 550D Only

EOS 1300D / 1200D / 1100D Only

EOS 100D Only

EOS M5 Only

M6 Only

EOS M50 Only

EOS M100/M10 Only

EOS M3 Only

EOS M Only

Interface Cable IFC-130U<sup>1</sup> Interface Cable IFC-200U Interface Cable IFC-200U/500U Mini-HDMI Cable HTC-100<sup>111</sup> Angle Finder C Wireless Remote Controller RC-6<sup>6</sup> Angle Finder C Mini-HDMI Cable HTC-100<sup>111</sup> Angle Finder C Wireless Remote Controller RC-6<sup>6</sup> Remote Controller Adapter RA-E3<sup>3</sup> Remote Switch RS-60E3<sup>3</sup> External Microphone<sup>111</sup> Eyecup Eb<sup>11</sup> Magnifier MG-Eb<sup>11</sup> Eyepiece Extender EP-E15<sup>11</sup> Rubber Frame Eb<sup>11</sup> Dioptic Adjustment Lens E Series<sup>11</sup> <sup>1</sup> Not for EOS 80D and 77D <sup>11</sup> Not for EOS 77D <sup>111</sup> Not for EOS 40D <sup>1</sup> Not for EOS 50D and 40D

Interface Cable IFC-130U<sup>1</sup> Interface Cable IFC-200U External Microphone<sup>111</sup> Interface Cable IFC-500U Mini-HDMI Cable HTC-100 Angle Finder C Remote Switch RS-60E3<sup>3</sup> Timer Remote Controller TC-80N3 (Requires RA-E3) Remote Controller Adapter RA-E3<sup>3</sup> Eyecup Ef<sup>11</sup> Magnifier MG-Ef<sup>11</sup> Eyepiece Extender EP-E15 II Remote Switch RA-N3<sup>3</sup> Extension Cord ET-1000N3<sup>3</sup> Video Cable VC-100 Rubber Frame Eb<sup>11</sup> Dioptic Adjustment Lens E Series<sup>11</sup> <sup>1</sup> Not for EOS 200D <sup>11</sup> Not for EOS 1300D, 1200D and 1100D <sup>111</sup> Not for EOS 600D, 550D and 1100D

Interface Cable IFC-130U<sup>1</sup> Interface Cable IFC-200U External Microphone<sup>111</sup> Interface Cable IFC-500U Mini-HDMI Cable HTC-100 Angle Finder C Remote Switch RS-60E3<sup>3</sup> Timer Remote Controller TC-80N3 (Requires RA-E3) Remote Controller Adapter RA-E3<sup>3</sup> Eyecup Ef<sup>11</sup> Magnifier MG-Ef<sup>11</sup> Eyepiece Extender EP-E15 II Rubber Frame Eb<sup>11</sup> Dioptic Adjustment Lens E Series<sup>11</sup> GPS Receiver GP-E2<sup>2</sup> <sup>1</sup> Not for EOS 200D <sup>11</sup> Not for EOS 1300D, 1200D and 1100D <sup>111</sup> Not for EOS 600D, 550D and 1100D

Interface Cable IFC-600U Remote Switch RS-60E3<sup>3</sup> Timer Remote Controller TC-80N3<sup>3</sup> Remote Controller Adapter RA-E3<sup>3</sup> \* Requires RA-E3

Battery Pack LP-E12 Interface Cable IFC-200U/500U Interface Cable IFC-130U Mini-HDMI Cable HTC-100 External Microphone<sup>111</sup> Mount Adapter EF-EOS M Wireless Remote Controller RC-6<sup>6</sup> <sup>1</sup> Not for EOS M50, M100 and M10

\* When using Battery Pack LP-E4/E4N with the EOS-ID X Mark II camera the continuous shooting speed and maximum burst rate will be lowered when compared to using the Battery Pack LP-E19. \*\* Although Battery Charger LC-E19 can be used to charge Battery Pack LP-E4/E4N, Battery Charger LC-E4/E4N cannot be used to charge Battery Pack LP-E19. \*\*\* When using ACK-E4 with the EOS-ID X Mark II camera the continuous shooting speed and maximum burst rate will be lowered when compared to using AC-E19 + DR-E19.

<sup>1</sup> The EOS 5D Mark III and EOS 7D require a firmware upgrade to be compatible with the GPS Receiver GP-E2. Firmware updates are available on each individual product's webpage on the Canon website. See canon-europe.com for our full line of products. <sup>2</sup> The WFT-E7A requires a firmware update and Interface Cables IFC-40AB II or IFC-150AB II to work with the EOS 5DS, 5DS R, 5D Mark IV and 7D Mark II. <sup>3</sup> EOS 80D, 77D, 70D, 60D/60Da, 50D and 40D need the Remote Controller Adapter RA-E3. <sup>4</sup> The digital compass function is not supported to work with the EOS 800D and 200D.