LEE RAM PRIME









assemble.

To change primer size, pull the post holder assembly apart.



· Primer dust accumulation can detonate. Regularly clean parts to prevent accumulation. The dust contains lead; a substance known to cause birth defects, reproductive harm and other serious physical injury. Wash hands after exposure.



WARNING Handling primers will expose you and others in the area to lead, which is known to the State of California to cause reproductive harm and cancer. For more information, www.P65Warnings.ca.gov.

⚠ CAUTION

- · Priming should not be attempted by persons not willing and able to read and follow instructions exactly. Do not permit distractions while priming.
- · Children should not be permitted to prime without strict parental supervision.
- · Always wear safety glasses and hearing protection when priming and shooting.
- · Primers and gun powder, like gasoline and matches, can be dangerous if improperly handled or misused.
- Primers will explode if shocked or crushed.

INSTRUCTIONS



Screw the shell holder adapter into your press.

Install the punch holder into the ram.

Snap universal press



shell holder (sold separately) into the top of the tool.



With the ram raised, place a primer into the primer guide.



Lower the ram iust far enough to slip a case in the shell holder.

Raise the ram gently until you feel the primer seat.

Verify primer is flush or slightly below flush into the case head.

The Lee Guarantees

LEE RELOADING PRODUCTS are guaranteed not to wear out or break from normal use for two full years or they will be repaired or replaced at no charge if returned to the factory. Any Lee product of current manufacture, regardless of age or condition, will be reconditioned to new, including a new guarantee, if returned to the factory with payment equal to half the current retail price.