


Attachment Screw and Groove Positions  
取付けねじと溝位置

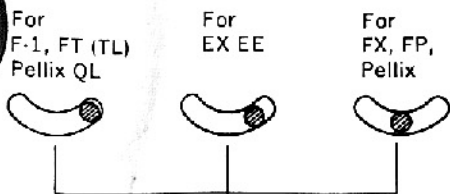

Camera Attachment Screw  
カメラ取付けねじ

Film Rewind Button Hole  
巻戻しボタン操作穴

Tripod Screw Hole  
三脚ねじ穴

Attachment Screw Hole  
for Vertical Position use  
縦位置用取付けねじ穴

**CANON INC.**

9-9, Ginza 5-chome, Chuo-ku, Tokyo 104, Japan  
 キヤノン株式会社  
 東京都中央区銀座5-9-9 〒104 (03) 572-4251  
 PUB. K2101-1039 0770B1 PRINTED IN JAPAN

# Canon CAMERA HOLDER F

Instructions  
使用説明書

Canon Camera Holder F is used in combination with a tripod or a copy apparatus to hold the camera in a stable, center of gravity position. Changing the camera to a horizontal or vertical position can be easily performed. This holder is very effective when a telephoto lens is used on the camera, making it comparatively heavy towards the front.

Camera Holder F can be used not only for the F-1 but also for all Canon single-lens reflex cameras after and including the Canon FX model.

■ Cameras on which Camera Holder F can be used: FX, FP, Pellix, Pellix QL, FT QL, EX EE, F-1.

■ Attachment screw position: The attachment screw of the camera holder is of the groove-shaped type so that it can move according to the different positions of the screw holes on the various cameras.

■ Always use a cable release when shooting with a slow shutter speed. Three Canon cable releases of different lengths are available.

## キヤノン カメラホルダー F

カメラホルダーは三脚あるいは、複写装置使用時に併用し、重心位置で安定に支えることができ、横位置、縦位置の変換も容易でしかも堅固に取付けできるアクセサリです。比較的重く前方に突出する望遠レンズ使用の場合などには最も効果的です。

カメラホルダーFは、F-1のみでなく、FX以降のキヤノン製1眼レフカメラならすべてに使用できる設計となっています。

- 使用できるカメラ：FX, FP, PELLIX, PELLIX QL, FT-QL, EX EE, F-1
- 取付けねじ位置：各カメラの取付けねじ穴位置の異なりに対してはカメラホルダーの取付けねじが移動できるような溝形式となっています。
- スローシャッターを切る場合には必ずケーブルリリースをご用意ください。キヤノンでは長さの異なるケーブルリリースを3種用意しています。