




INSTRUCTIONS

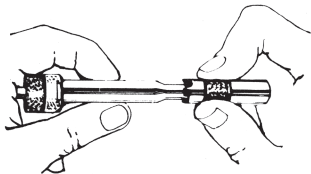

Lock deprimed case in shell holder with the lock stud. Insert pilot into case with pin in flash hole and rotate until it stops cutting. If no metal is removed case does not need trimming.

Operation is greatly speeded up by chucking 1/4" shank in electric drill to spin case. While spinning, case can be chamfered inside and outside with a Lee chamfer tool. If desired you can also polish the case with No. 0 steel wool.

WWW.LEEPRECISION.COM